



ELECTROCOMPANIET

If music really matters...



SPIDER

CD Clamp

Owner's Manual

ENG

Unpacking the SPIDER

Immediately upon receipt of the SPIDER, inspect the carton for possible damage during shipment. The carton and packaging have been designed to provide the safest possible protection for the transport of your product. Unpack the unit carefully. Save all packaging materials for future shipment.

The contents of the carton

- 1 pcs Electrocompaniet SPIDER
- 1 pcs Plastic stand
- 1 pcs Solid cone spindel

If you need to contact Electrocompaniet

Electrocompaniet as,
Breivikveien 7,
N-4120 Tau,
Norway

Service department: service@electrocompaniet.no
Web: www.electrocompaniet.com

1. **Remove spring Cone**

See Fig. 1: Lift-off the spring cone e.g. by using a pair of tweezers.



Figure 1

2. **Remove turntable ring**

See Fig.2: Lift-off the plastic turntable ring e.g. by using a pair of tweezers.

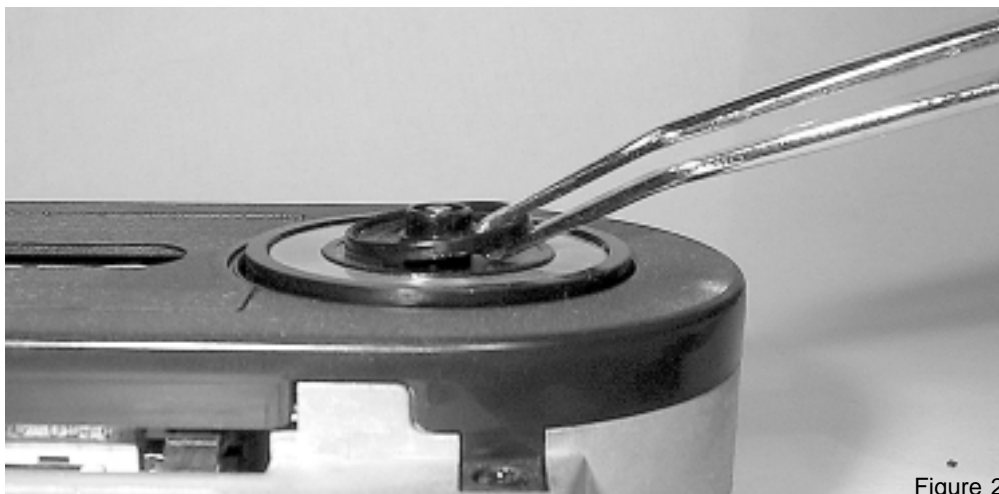


Figure 2

1. **Remove solid Cone**
See Fig. 1: Lift-off the solid cone e.g. by using a pair of tweezers.

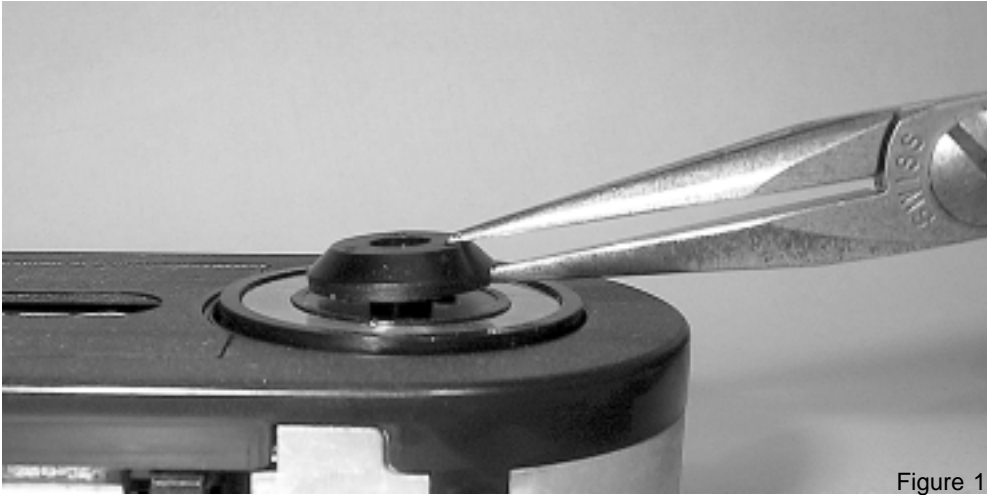


Figure 1

1. Mount solid cone

See Fig. 1: Place the new solid cone over the plastic turntable and push down gently until it touches the turntable surface. Do NOT apply any glue.

Warning: Do NOT exceed maximum force allowed to turntable.

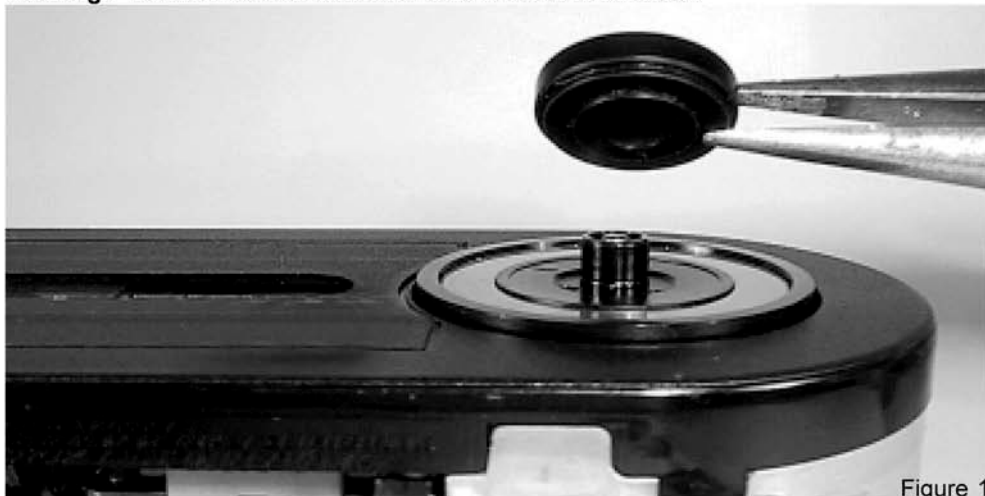


Figure 1



Made in Norway

WWW.ELECTROCOMPANIET.NO