


---

### 3. The Remote Control

The remote is already preprogrammed to work with EMC 1 UP with a following layout:  
Please refer to the EMC 1 UP user manual (Page 9) for the full buttons discription.

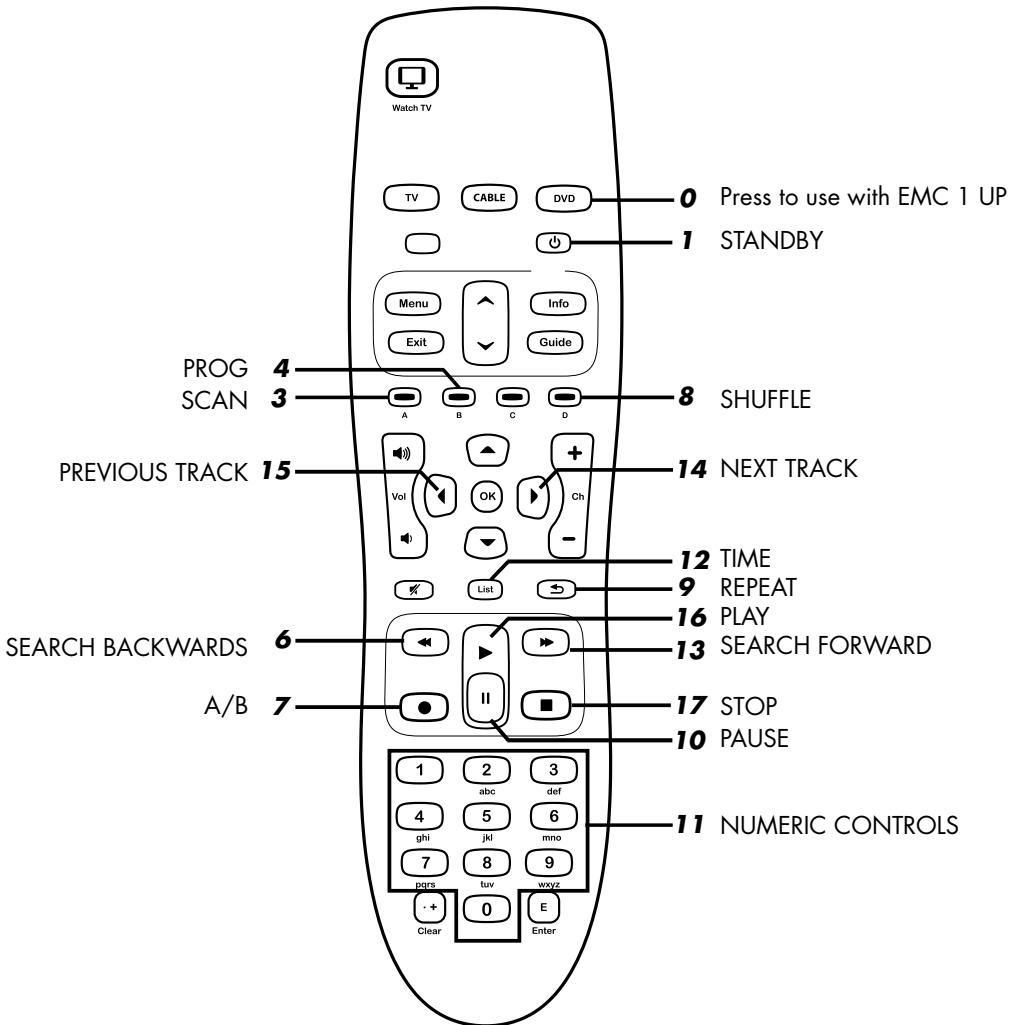

---

# UNIVERSAL REMOTE CONTROL

Your EMC 1 UP comes with a new universal remote control.  
The remote is already preprogrammed to work with EMC 1 UP.


## 1. Inserting / Changing Batteries

Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the proper way (AAA, IEC R03 1.5V)

### NOTE:

Batteries must not be exposed to excessive heat such as sunshine, fire...

Do not mix old batteries with a new batteries as this may damage the remote control.

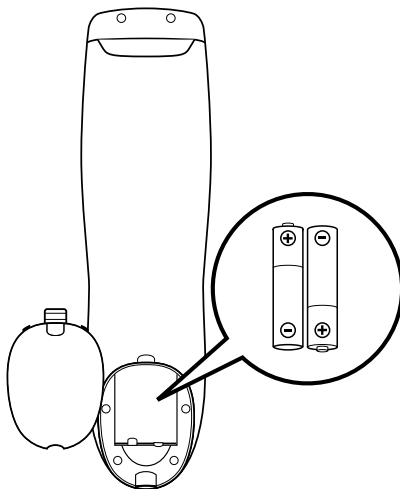

## 2. Programming the Remote control for other devices

If you want add more devices go to <http://setup.myharmony.com> sign up for create account.

### NOTE:

This will reset the preprogrammed configuration of the EMC 1 UP. The EMC 1 UP needs to be added again and buttons must be assigned:

Manufacturer: Select Electrocompaniet

Model: EMC 1